

HOW TO DISCONNECT A LAWN IRRIGATION SYSTEM

1. Turn off the water to your lawn irrigation system.
2. Cut the irrigation system water supply line – after the water supply valve – in your house.
3. Outside – cut the water line 2” above the ground.
4. Remove the backflow preventer, the valves attached to it, and the pipe attached to it.
5. Cap the pipe end in your house, and the pipe end entering the ground.
6. Fill the hole in your wall with an appropriate material or product of your choice.
7. Call 734-675-4000 ext 112 to arrange an inspection of the disconnection, so that our records can be property updated.